# MWS1A-IP-PRM

# Weather Proof Microwave Presence Detector - wall mounted

### Overview



The MWS1A-IP series of microwave presence detector switches are designed to provide automatic control of lighting, heating or ventilation loads. The MWS1A-IP detects movement using a highly sensitive microwave detector. This works by emitting low power microwave signals and measuring the reflections as the signals bounce of moving objects. The MWS1A-IP is optimised for wall mounting applications to give detection over long distances.

When movement is detected the load is turned on. When an area is no longer occupied the load will switch off after an adjustable time out period.


The internal light sensor provides additional energy saving in lighting applications. When an area is occupied lighting is only switched on when the level of natural light is below a preset level.

Three variants are available

MWS1A-IP-PRM Mains voltage, switched live contact MWS1A-IP-PRM-VFCMains voltage, isolated changeover contact

### **Features**

Fig 1: Front features

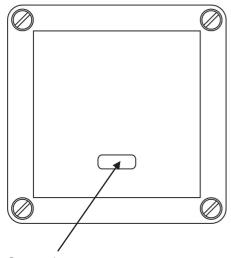

Sensor Lens which covers...

IR Receiver Light Level Sensor Status LED

#### **Microwave Sensor**

Detects movement within the unit's detection range, allowing load control in response to changes in occupancy.

#### **IR Receiver**

Receives control and programming commands from an IR (infrared) handset.

#### **Light Level Sensor**

An integral adjustable photocell allows the lights to be kept off if there is sufficient ambient light.

#### **Presence detection**


When movement is detected the load will automatically turn on. When the area is no longer occupied the load will automatically switch off after an adjustable time period.


#### Status LED

The LED flashes **R**ed to indicate the following:

Walk Test LED active	when movement is detected
Valid setting received	<del>-\(\text{\tin}\text{\tex{\tex</del>

#### MWS1A-IP-PRM

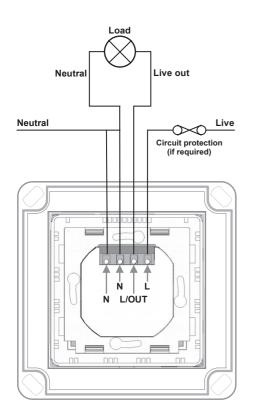

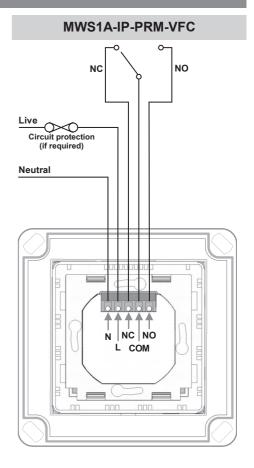

To switch from more than one position simply wire two or more units in parallel to achieve two way and intermediate switching.

The detector should be sited so that the occupants of the room fall inside the detection pattern shown overleaf, at a recommended height of 1.2m to 1.5m for wall sensors. Note that the higher the sensor is installed the shorter the detection range will be.

- Do not site within 1m of any lighting or ventilation equipment.
- Do not fix to a vibrating surface.
- Site as far away as possible from the surface of metal objects.
- Ensure that all cable entry to the enclosure is via suitable cable glands and seal with silicone sealant where appropriate.
- If it is necessary to screw through the rear of the enclosure ensure that any holes are covered with the caps provided and sealed with silicone sealant where appropriate.
- Note: when externally mounted the unit may be triggered by trees, animals, leaves etc.

# **Fault finding**

#### What if the load does not turn ON?

- Check to see if the live supply to the circuit is good. For the MWS1A-IP-PRM version only: strap across the *L* and *LIVE OUT* terminal to turn the load on.
- If the supply and wiring are good, check the LUX level setting. Increase the LUX level setting to allow the controller to turn on at higher ambient natural light level.

#### What if the load does not turn OFF?

- Ensure that the area is left unoccupied for a greater time period than the time out period set using the switch.
- Make sure that the sensor is not adjacent to vibrating surfaces or objects (e.g. ventilation equipment).
- The unit may pick up movement through thin partitions or walls. Reduce the sensitivity.

## **Programming**





Number of Shift key presses

The functionality of the MWS1A-IP is controlled by a number of parameters which can be changed or programmed by any of the following devices:

- **UHS5** Infrared Handset. See below for programmable functions.
- **UN-LCDHS** Infrared Handset (with LCD). See user guide for full programming details. For most basic programming operations the UHS5 handset can be used and the following procedures are based on using this device.

Point the handset at the Sensor and send the required programming commands to the unit as shown below.

Valid commands will be indicated by a red LED flash. See page 1 for details of other LED responses.


Note: other functions on the UHS5 which are not shown below are not applicable to this product.


0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0

		SHIFT					
Parameter	Default	0	1	2	3	UHS5 Handset Graphics	Description
Name	Value	O O SHIFT 1 SHIFT 2	SHIFT 1 SHIFT 2	SHIFT 1 SHIFT 2	SHIFT 1 SHIFT 2		
Button Activation				ctivation			
On / Raise		On				ON/RAISE	Turn lights on.
Off / Lower		Off				OFF/LOWER	Turn lights off.
Walk test	Off	On	Off			OFFON	When set to On this causes a red LED to flash on the sensor when it detects movement. Use this feature to check for adequate sensitivity levels.
Time Out (Time adjustment)	10 mins	1, 10 & 20 minutes	5, 15 & 30 minutes			5/1 15/10 30/20 IIMEOUT MINUTES	Once the detector is turned on, this value sets how long the lights will stay on once movement has ceased.
Lux on level (Switch level on)	9	2, 5 & 7	4, 6 & 9			UX ON LEVEL / LIGHT LEVEL	Lux level setting to prevent the luminaires being switched on if the ambient light level is sufficient (adjustable between 1 and 9). The luminaires will always be switched on at level 9.
Lux off level (Switch level off)	9	2, 5 & 7	4, 6 & 9			DALI LUX OFF LEVEL DAI	Lux level setting to switch the luminaires off during occupancy if the ambient light level goes above the setting (adjustable between 1 and 9). Level 9 will always keep the lights on. This setting can be used for "window row switching".
Sensitivity	9	1, 5 & 9	3, 6 & 8			3/1 6/5 8/9 SENSITIVITY	Sensitivity level for detecting movement.  1 = low sensitivity 9 = high sensitivity
Defaults				D		D	Returns the unit to the default settings.
Shift						SHIFT	Use this button to select the settings in red and blue signified by the 'Shift 1' and 'Shift 2' LEDs

# Detection pattern

### **Dimensions**

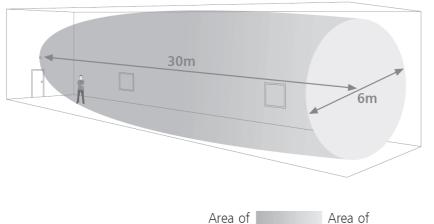

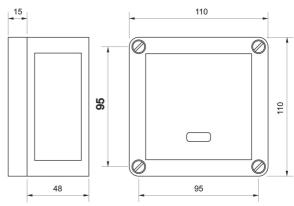

### Technical data

#### MWS1A-IP-PRM

Supply Voltage Frequency Power consumption

230VAC +/- 10% 50Hz On 1.15W Off - 790mW

Load 10A of lighting and or ventilation including incandescent, fluorescent, compact fluorescent, low voltage (switch

primary of transformer).

high sensitivity

#### MWS1A-IP-PRM-VFC

Supply Voltage Frequency Power consumption

Load

230VAC +/- 10% 50Hz On 1.15W Off - 790mW

Normally closed contact 2 Amp maximum

Minimum load 100mA Normally open contact 6 Amp fluorescent lighting and resistive

3 Amp compact fluorescent lighting 3 Amp low energy lighting

3 Amp low voltage lighting (switch primary of transformer)

Fluorescent lighting (max 6 fittings

recommended)

#### All models

lower sensitivity

Weight **Terminal Capacity** Time out period Light level

Fixing method Temperature Humidity Material (casing) IP rating Compliance

Safety

For fluorescent lighting total power factor correction capacitance must not exceed 40uF

3 Amp fans and ventilation equipment Switch SON lighting loads via a contactor Minimum load 100mA

0.25kg

 $2.5 \text{mm}^2$ 

Adjustable 10 seconds to 99 minutes. Optional adjustment by using IR programming handsets.

Surface fixing by screws (not supplied) .

-10°C to 35°C

5 to 95% non-condensing Polystyrene Type Class 2 IP 66

EMC-2004/108/EC

LVD-2006/95/EC

The microwave radiation emitted by these units is extremely low power. At a distance of > 50mm the power density is <6% of

the ANSI IEEE C95.1 -1991

recommended microwave power density. At a distance of 5mm from the unit it is <84% of recommended power density.

### Part numbers

MWS1A-IP-PRM Weatherproof microwave presence detector (wall mounting)

MWS1A-IP-PRM-VFC Weatherproof microwave presence detector (wall mounting) Volt Free Contact

## Frequency compatibility

The allowable frequency of operation of this product is different depending on region. Please select the correct order code using the table below.

Code suffix	Region	Frequency
blank	UK, China, India, Middle East, Malaysia, Hong Kong, Singapore	10.687GHz
-R2	Australia and all of Europe <u>except</u> : UK, France, Portugal, Germany, Switzerland, Austria, Slovak Republic, Republic of Ireland	10.525GHz
-R3	France, Portugal, Switzerland	9.900GHz
-R4	Germany, Austria, Slovak Republic	9.350GHz
-R5	Republic of Ireland	10.41GHz

#### **IMPORTANT NOTICE!**

This device should be installed by a qualified electrician in accordance with the latest edition of the AS/NZS Wiring Rules and any applicable Building Regulations.